


SPECIFICATIONS

Product Code: SNNR
Operation Voltage: AC/DC 10-30V±%5 50/60Hz
Static - Current: 40 mA
Active Current: 60 mA
Storage Capacity: 2000 Adet ID Kart

Contact Time : 01-99 seconds.
Reading Distance : 10-100 mm
Operation Temperature :-10°C ~ +60°C
Card Type : EM or EM compitable card
Dimentions : 140 x 47 x 20 mm

GENERAL STRUCTURE OF PARTS AND CABLE DIAGRAM

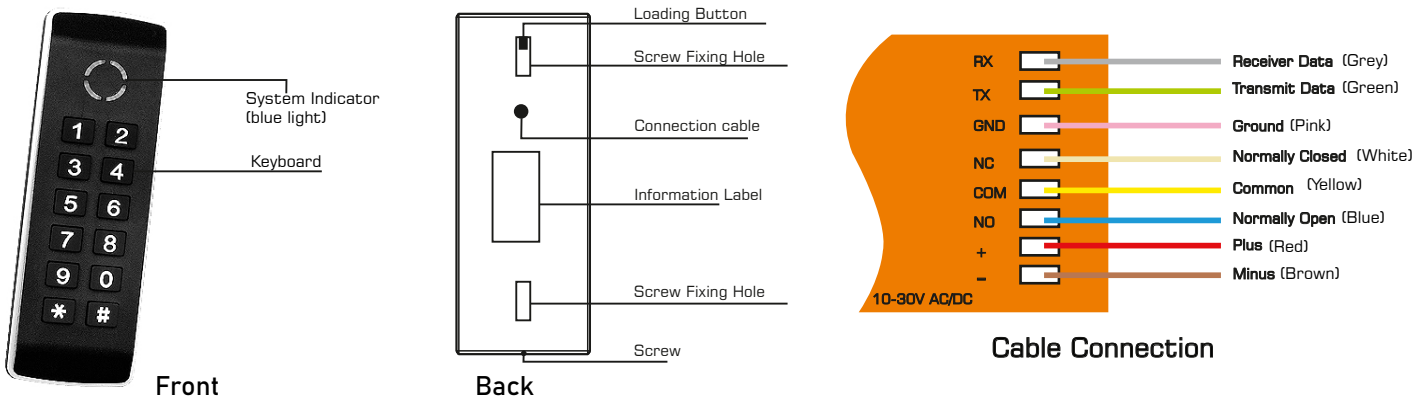

GENERAL FEATURES

- * FACTORY SETTINGS MASTER PASSWORD: 1357
- * FACTORY SETTINGS ENTRY PASSWORD: 1357
- * FACTORY SETTINGS CONTACT TIME 1 SECONDS
- * IT HAS 2000 PCS ID CARD LOADING CAPACITY.

- * MASTER CARD TEACHING: THE BACK HOLD PRESSED LAODING BUTTON FOR 5 SECONDS. AFTER SIGNAL FIRST, SHOW MASTER ADD , THEN SHOW MASTER CLEAR, THE PROCESS IS COMPLETED.
- * IN THIS PROCESS THE FIRST INTRODUCED CARD IS ALWAYS BE MASTER ADD AND THE SECOND INTRODUCED CARD IS MASTER CLEAR
- * MASTER CARDS CAN NOT BE DELETED IN ANY CASE, ONLY A NEW MASTER CARD CAN BE TEACHED ON IT.

INSTALLATION SETTINGS

DESCRIPTION	MASTER PASSWORD	SETTING NO	OPERATION	ÇIKIŞ
CHANGE MASTER PASSWORD	1357 #	00	NEW PASSWORD (4 DIGIT)	#
CHANGE LOGIN PASSWORD	1357 #	01	NEW PASSWORD (4 DIGIT)	#
NEW CARD TEACHING (BEFORE EXIT, BACK TO BACK CAN TEACH A NEW CARD)	1357 #	02	READ CARD	#
DELETING A CARD (BEFORE EXIT, BACK TO BACK CAN BE DELETED CARD)	1357 #	03	READ CARD	#
TEACHING A CARD WITH ID NUMBER	1357 #	04	ENTER ID NUMBER (10 DIGIT)	#
DELETING A CARD WITH ID NUMBER (10 DIGIT)	1357 #	05	ENTER ID NUMBER (10 DIGIT)	#
RETURN TO FACTORY SETTINGS	1357 #	06		#
DELETE ALL STORED CARDS	1357 #	07		#
DOUBLE CONTROL (1: CARD AND PASSWORD ACCESS 0: ONLY CARD OR PASSWORD ACCESS)	1357 #	08	1 OR 0	#
DOOR ACCESS LOCKED (1: DOOR LOCK 0: DOOR OPEN TO ACCESS)	1357 #	09	1 OR 0	#
LOCK ACCESS WITH PASSWORD. (1: PASSWORD LOCK 0: DOOR OPEN TO ACCESS)	1357 #	10	1 OR 0	#
CONTACT TIME (UP TO 01-99 SECONDS)	1357 #	11	01 BETWEEN 99 NUMBER	#
TEACHING CARD WITH MASTER CARD (BACK TO BACK CAN BE DELETED CARD)	SHOW CARD TO ADD		SHOW CARD TO ADD	SHOW MASTER ADD CARD
DELETING CARD WITH MASTER CARD (BACK TO BACK CAN BE DELETED CARD)	SHOW CARD TO DELETE		SHOW CARD TO DELETE	SHOW MASTER CLEAR CARD
MEMORY DELETE (DELETES ENTRY PASSWORD AND ID CARDS - RETURN TO FACTORY SETTINGS)	-		HOLD PRESSED BUTTON	GIVE ELECTICITY PUSH BUTTON FOR 5 SEC
OPEN DOOR WITH ID NUMBER (10 DIGIT)	ENTER CARD NUMBER			#
OPEN DOOR WITH ENTRY PASSWORD (4 DIGIT)	ENTER LOGIN PASSWORD			
DOOR OPENING WITH BINARY CONTROL	SHOW CARD			ENTER PASSWORD
CANCEL			*	